CATALOGUE

DATA

REMOTE OPERATOR





REMOTE OPERATOR

The Remote Operator (RCM01) is a user-friendly human interface for the remote operation and monitoring of AuCom soft starters. Features include:

Operational Control Push Buttons

- Start
- Stop
- Reset
- **Emergency Stop**

Status Indication LEDs

- Starting
- Running
- Tripped

Motor Performance Readout


- Motor Current
- Motor Temperature
- Trip Code


Analogue Output (4-20mA)


Motor Current


- Sundry Features

 IP54 front protection when panel mounted
- Easily read 15mm LED display Universal 92mm² panel cutout
- Simple 3 step installation procedure
- Compact design
- RS485 serial activity LED indication CE, UL, C-UL and C✓ approved

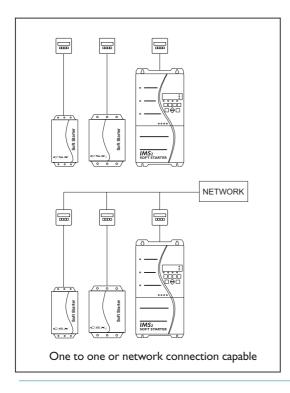

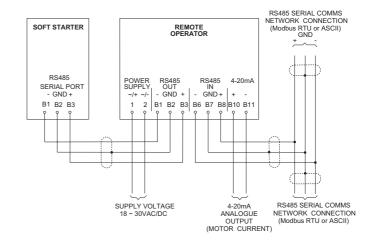

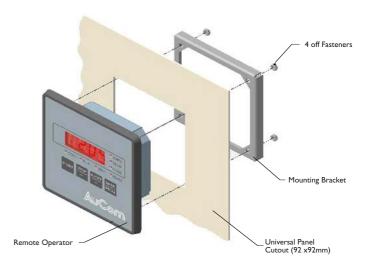

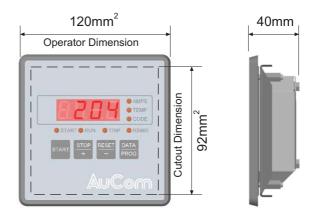



AuCom Electronics Ltd 123 Wrights Road, P O Box 21-245, Christchurch, New Zealand. Phone: +64 3 338-8280 Fax: +64 3 338-8104 Internet: http://www.aucom.com

